


TVGuardian® 501c HD

Quick Start Guide

Included in the box: - TVGuardian 501c HD - 1 HDMI Cable - 1 Yellow Composite Cable
 - 1 AC Power Adapter - 1 Remote Control

Standard Connections for Your Source (cable/satellite receiver or DVD/Blu-ray Player with HDMI and Yellow Composite Video Connection):

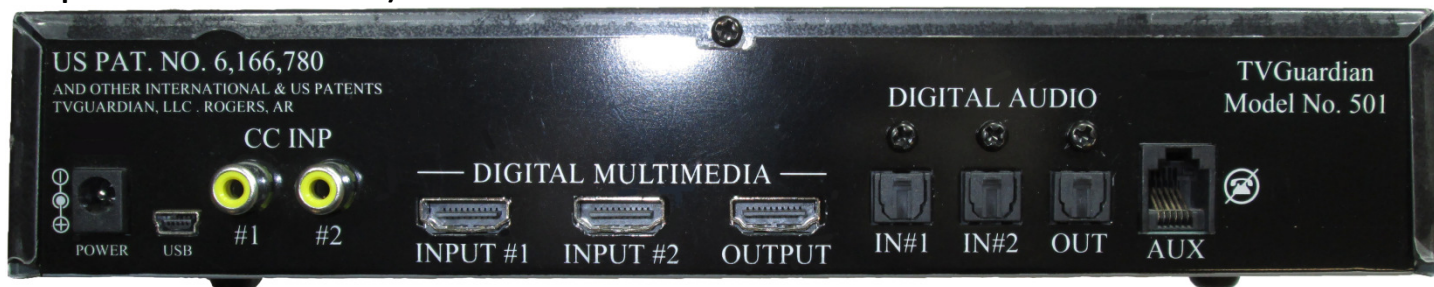

Basic Setup: Source → TVGuardian 501c HD → HD TV

- Step 1: Required** – Connect the HDMI Cable from your source HDMI output to the TVGuardian 501c HD's HDMI INPUT #1
- Step 2: Required** – Connect the yellow composite video Cable from your source composite video OUTPUT to the TVGuardian 501c HD's CC INP #1
- Step 3: Required when you are not using a Home Theater or Sound Bar for Audio** – Connect a second HDMI cable (not included) from the TVGuardian 501 HD's HDMI OUTPUT to your HDTV's HDMI INPUT

Sound Bar & Home Theater Audio Setup:

- Option 1:** You may connect a TOSLINK Optical Digital Audio Cable (not included) from your source to the TVGuardian's Digital Audio IN #1 and another TOSLINK Optical Digital Audio Cable from the TVGuardian's Digital Audio OUT to your home theater receiver or sound bar INPUT
- OR Option 2:** Instead of running a HDMI cable from the TVGuardian to your TV (see step #3 above), you may connect the HDMI cable from the TVGuardian's HDMI OUTPUT to your home theater HDMI INPUT and connect another HDMI cable from your home theater receiver to your HDTV.

Remote Control Operation and TVGuardian Settings:



Once you have the TVGuardian setup, Press **MNU** on the remote and you should see:

TVG Settings Menu (Parents) (Kids) (Family) (Other)		
TVG Mode	(Tolerant)	(Moderate) (Strict)
CC Mode	(Off)	(On Mute) (On Always)
Wordsets		
Religious	(Filtered)	(Off)
Sexual Refs	(Filtered)	(Off)
Hell & Damn	(Filtered)	(Off)

TVG: Toggles between Parents, Kids, Family and the Other filter settings.

OPT: Move through the options.

SEL: Changes the settings.

To change the **TVG Mode** from **Strict** to **Moderate**, highlight **TVG Mode** by pushing **OPT**. Push **SEL** until **Strict** changes to **Moderate**.

To Exit the Menu: Press the MNU button.

A Full User Manual, Installation Videos and Support are Available at www.tvguardian.com.